DATE:	FIRMWARE:	ERP CODE:
VERSION:	_CATALOG#:	

# **Basic External High Bay Sensor**











#### **FEATURES**

- $\cdot \, \text{This sensor was designed for automatic lighting control in high or low bay application}.$
- · Different lens options provided.
- · Includes a hold-off daylight level feature to prevent lighting from turning on when there is sufficient ambient light.
- · Customize dimming level, delay time and control mode easily via a remote controller.

#### **DIMENSION**

Unit:inch/mm

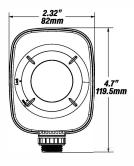


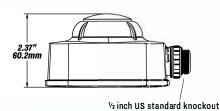


AMERICAN INCH PRODUCTS		
Size	T.P.I	Major Dia.
	inch	inch
R1/2	14	0.825

#### **Extension Adapter (Optional)**

**EJ30** 

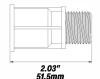



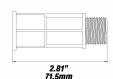

MODEL	DESCRIPTION
EFS01RE	AC External Photo/microwave Motion Sensor
HBL1-2-W	HBL1High Bay Lens
HBL2-2-W	HBL2 High Bay Lens
MBL1-2-W	MBL1 Middle Bay Lens
EJ30	Extension Adapter
EJ50	Extension Adapter

#### **SPECIFICATIONS**

Input Voltage: AC120-277V

Frequency: 60Hz

Input Current: 10A Max @ 120V,

4.3A Max @ 277V

Input Power: 1200W Max

Output Voltage: AC120-277V

Output Current: 10A Max @ 120V,

4.3A Max @ 277V

Output Power: 1200W Max

Dimming: Class 2, 0-10V DC 10mA Max

Sinking Current: 10mA Max

Housing Material: UL 94-5VA

Detection Range: 40-80ft

Mounting Height: 20-40ft

IR Remote Distance: Max 26'

Indoor/Outdoor Use

Operating Temperature: -30°C to 65°C,

-22°F to 149°F

Storage Temperature: -30°C to 85°C,

-22°F to 185°F

IP Rating: IP66

Color: White


Warranty: 5 years warranty

Comply to UL8750, RoHS

Safety: cULus Listed LED Controller

E504054


# **WIRING**

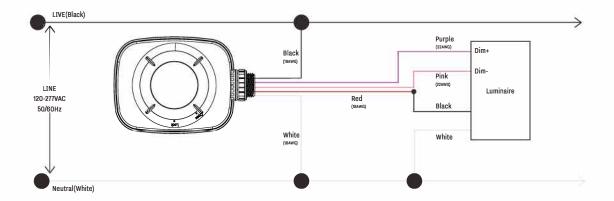


## **DIMENSION**


Unit:inch/mm

# HBL1

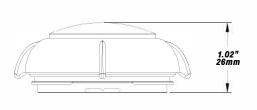


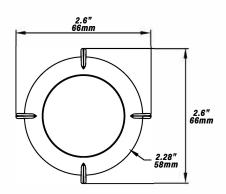

## **Coverage Side View**

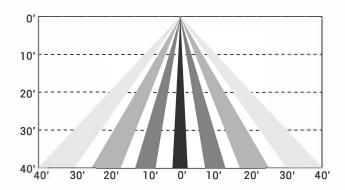


## **Coverage Top View**

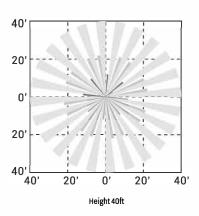


# **DIMENSIONS**


Unit:inch/mm

## HBL<sub>2</sub>

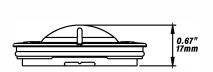


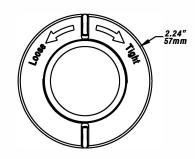


## **Coverage Side View**

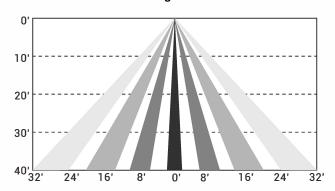


## Coverage Top View

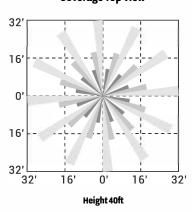


# MBL1

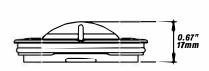


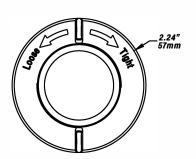


#### **Coverage Side View**

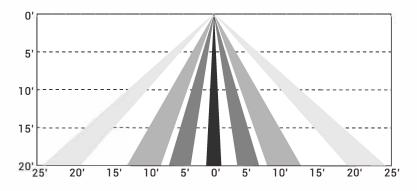

## Coverage Top View

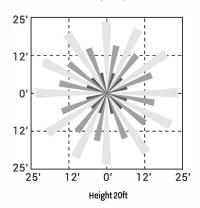

# **MARKING**

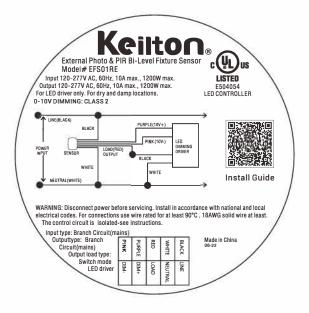

#### **REMOTE INSTRUCTION**

#### Memory Mode (Commissioning) To begin commissioning, follow the steps below:

- 1. Select either A, B, C, D.
- 2. Indicator lights on the remote will flash to indicate the current saved settings.
- 3. Settings can be configured by pressing appropriate buttons in the highlighted gray area of the remote. (TRIM-LEVEL, SENSITIVITY, HOLD TIME, STANDBY DIM, STANDBY TIME, and PHOTOCELL). Review selected settings and make changes as necessary.
- 4. Point IR remote to desired luminaire for configuration and press " SEND ".
- 5. If configuration is successful, luminaire will flash two times suggesting settings are saved. Any parameter change to the current saved settings on A to F will override previous settings and will be automatically saved on the remote. If configurating multiple luminaires, select the configured memory mode A to E then follow steps 4 and 5.
- \*\*\* E Mode allows visual adjustment to choose the desired dimming Level.

#### Continuous Adjustment Mode or Daylight Harvesting (F Mode) enables dimmability in response to daylight availability.

- 1. Point IR remote to desired luminaire.
- 2. Press "ON" then press DIM+ or DIM-to adjust dimming level.
- 3. Press "F", indicator lights on the remote will indicate current saved settings. Note: only TRIM-LEVEL, SENSITIVITY, and HOLD TIME can be selected for Daylight Harvesting settings.
- 4. Review selected settings and make changes as necessary. Press "SEND".
- 5. If configuration is successful, luminaire will flash twice to confirm settingsaved. If configurating multiple luminaires, select the configured DAYLIGHT HARVESTING settings then follow steps 4 and 5.

#### **Reset Mode**

Default Settings: Motion --> 100%, No Motion >= 5min --> DIM to 30%, No Motion >= 60min --> Off

ON	Turns ON Luminaires	
OFF	Turns OFF Luminaires	
TEST	Testmode willlast 5 mins then return to previous setting Testmode willhold time 2 seconds SDL 50% and standby time 2 seconds	
RESET	Trim-High=100%,sensitivity=High,T1=5min,Standby Dim=30%, T2=60min,Photocell=OFF	
DIM+/-	Remote will manually dim luminaire up or down by increments of 0.5volts. Must be smooth dimming if holding dimming button.	
TRIM-LEVEL	Set Maximum threshold value 50/75/100%	
SENSITIVITY	OFF(PIR OFF Enter PC ON/OFFfunction)/LOW(50%)/HIGH (100%)	
HOLD TIME	(time of no occupancy after which fixture goes to standby) 30s/ 5min/15min/30min	
F MODE DAYLIGHT HARVESTING	(Enable/Disable) Measure and set feature to allow the fixture to maintain a light level. If turned ON.	
STANDBYDIM	Select any standby dim level 0/10/30/50%	
STANDBY TIME	Standby time - 10s / 5min/15min/30min/1h/∞. "∞" means the stand-by time is infinite and the fixture is effectively controlled by the daylight sensor)	
PHOTOCELL	LOW (1fc) / HIGH (50fc)/CAL Collecting The current Lux Level OFF	
MODE	Set settings to a Program profile A to F	
SEND	Send settings to sensor	
DEFAULT MODE A	Trim-High=100%,sensitivity=low,T1=30min,StandbyDim=50%, T2=∞,Photocell=CAL	
DEFAULT MODEB	Trim-High=100%,sensitivity=low,T1=30min,Standby Dim=50%, T2=15min,Photocell=CAL	
DEFAULT MODE C	Trim-High=100%,sensitivity=low,T1=30min,Standby Dim=50%, T2=15min,Photocell=0FF	
DEFAULT MODED	Trim-Low=50%, sensitivity=low,T1=30min,Standby Dim=50%, T2=30min,Photocell=CAL	
DEFAULT MODE E	Manual Mode,Trim-High=100%	
DEFAULT MODE F	Daylight Harvesting,Trim-Low=50%,sensitivity=low,T1=15min	

